





WINGRESS BATHWARE

Corporate office

Ground Floor, office no. 39, survey no .144/1P 10/P1, Plot No. 4,5 and 6
Akshar Business Center, At- Jambudiya, Morbi, Gujarat-363642

Customer care: +91 97277 70458

E-mail: wingressbathware@gmail.com | Web: www.wingressceramica.com











Dear Colleagues, Partners and Well-Wishers,

WINGRESS Bathware is a modernized enterprise integrated with R&D, manufacturing, sales and services, having a complete set of integrated sales team, applying brand strategy, setting up enterprise image, and being the advocator and Pioneer in the field of Ceramics.

We are feeling very happy to introduce our new venture WINGRESS BATHWARE with wide range of Sanitaryware products and accessories.

Keep improving and striving for excellence is the core strategy to our quality improvement. WINGRESS BATHWARE is devoting itself to exploring deeper on global sanitary ware, so as to provide high-quality products and sincere, sophisticated services to the whole customers, to build up the better life for all human.

The people of WINGRESS BATHWARE will put their best efforts in the direction of providing luxurious bathroom solutions to our respected customers. The dynamic team of marketing and the innovative technologists will design and style products for the demanding customers.

In our quest to make life great, we will always make our processes efficient to make pricing affordable to most of the people of our country and around the world. Our processes and management systems will be improved continuously to ensure that our bathroom solutions will value for money for the customer and a great business proposition for our dealers and distributors.

The future is challenging, but we are sure that we will beat the milestones set by us. We are setting a goal for future to meet our vision of being the most recognized brand in bathroom solution for a long time that make homes better and lives happier. We inspire people to live their Dreams and drives Growth.

Together we can beat the Best and Lets Make it Happen.



of luxury

Give your bathspace a new lease of life by composing a subtly luxurious look that is as unique as you are.

Wingress is a name synonymous with elegance and functionality. Wingress offers you a versatile, fresh and highly functional range of bathwares. The company envisions becoming a leading seller in the sanitary ware market with our innovative range of products and solutions.

Our designs complement well with the spaces and your needs in general. The range of our sanitary ware is all about design and strokes which are trending globally. The product finishes play a vital role in creating the look and feel of your dream bathroom.

Our products are manufactured using the most advanced technology process to deliver high quality products which will bring you renewed sense of satisfaction.





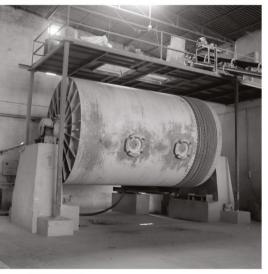






Table Top

INDEX



ONE PIECE CLOSET



WINGRESS

TILES · BATHWARE

AVA Code: WGB001 L 645 W 355 H 715mm S-Trap 100,225mm















ALMA Code: WGB005 **L** 680 **W** 360 **H** 720mm S-Trap 225mm FEATURES WASH DOWN SOFT CLOSE DUAL FLUSH SEAT COVER FLUSH COLOR

ANTON

FEATURES <u>...</u>

WASH DOWN FLUSH

COLOR

























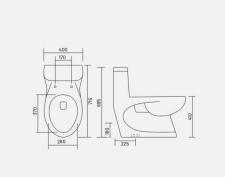








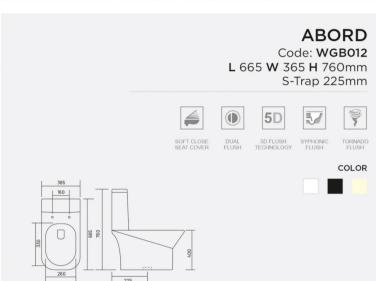





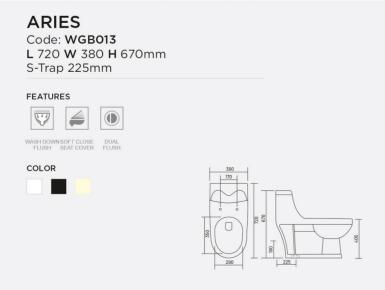











AZIZ Code: WGB016 **L** 645 **W** 360 **H**740mm S-Trap 300/225mm

FEATURES






SYPHONIC 6D FLUSH FLUSH TECHNOLOGY

COLOR



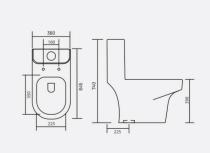


12 luxury like heaven luxury like heaven | 13









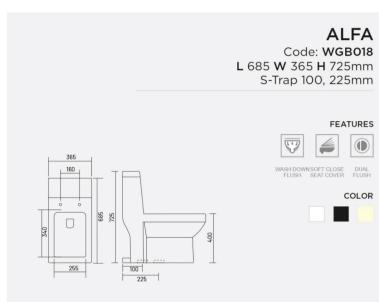














14 luxury like heaven 15

WALL HUNG CLOSET



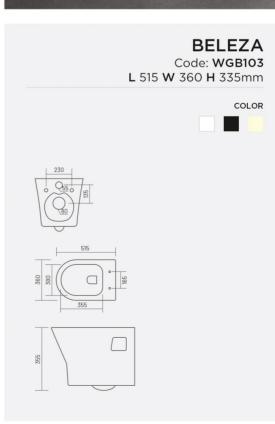














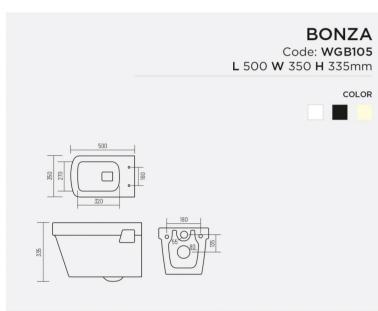












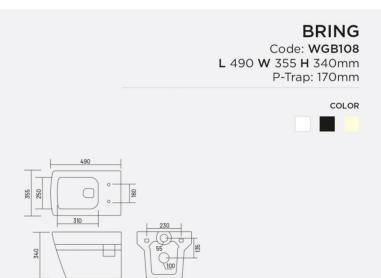






































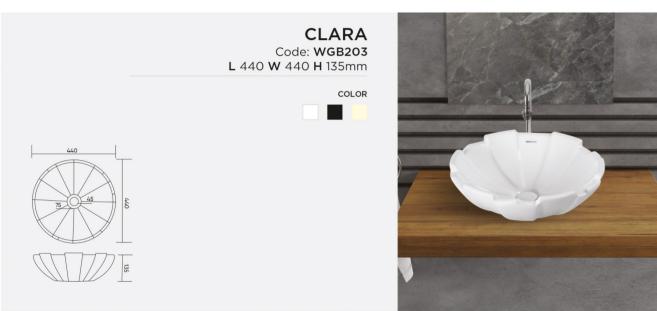

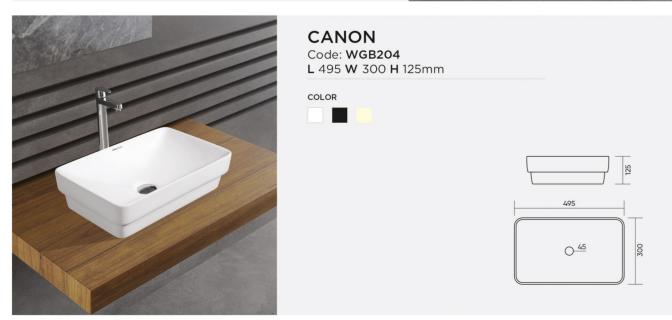



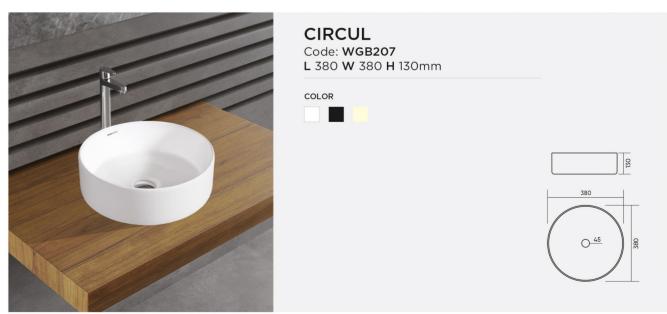


luxury like heaven 25 24 luxury like heaven









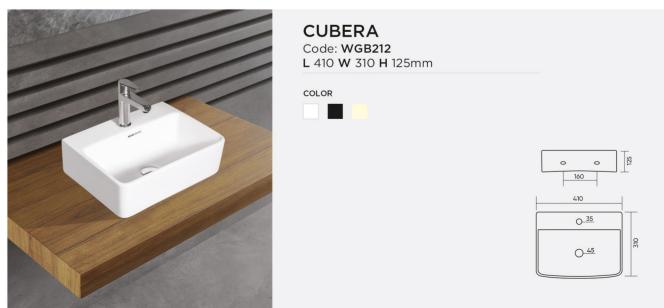

26 | luxury like heaven luxury like heaven 27

<u>45</u>








CARY

COLOR

Code: **WGB214 L** 400 **W** 400 **H** 115mm

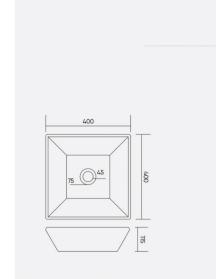











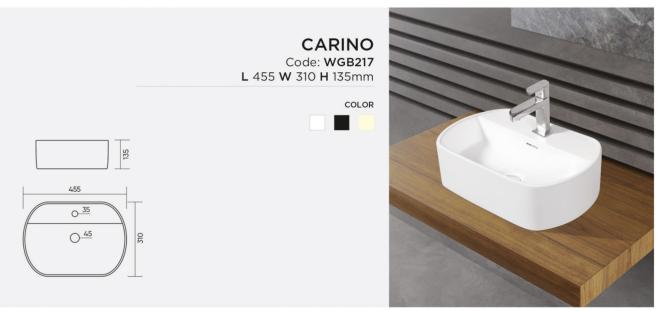

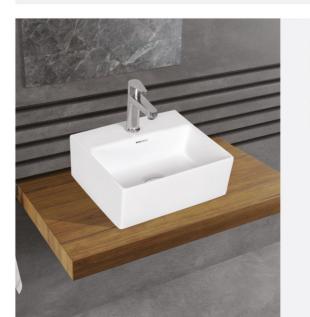





28 | luxury like heaven | 29








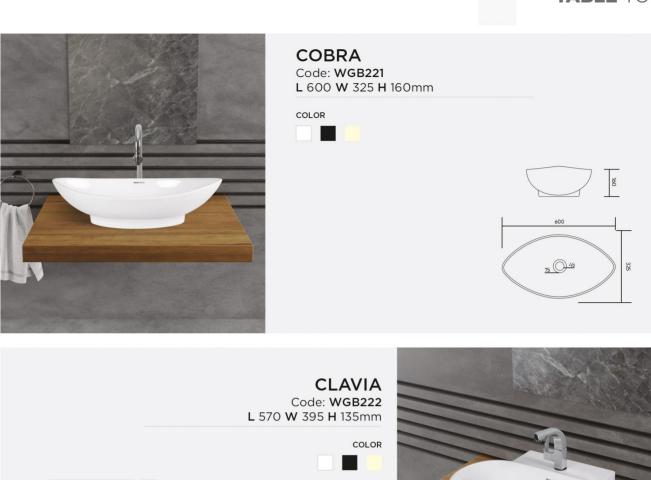

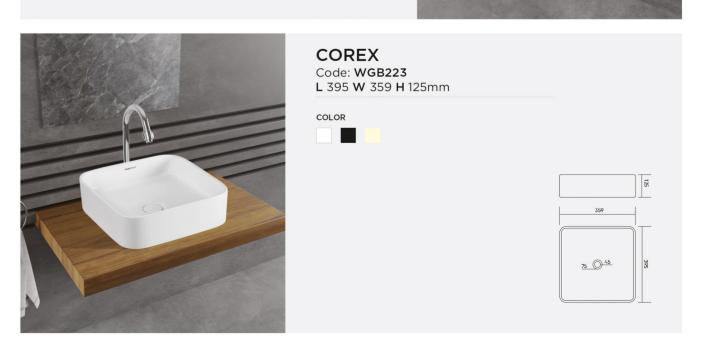



30 luxury like heaven 31




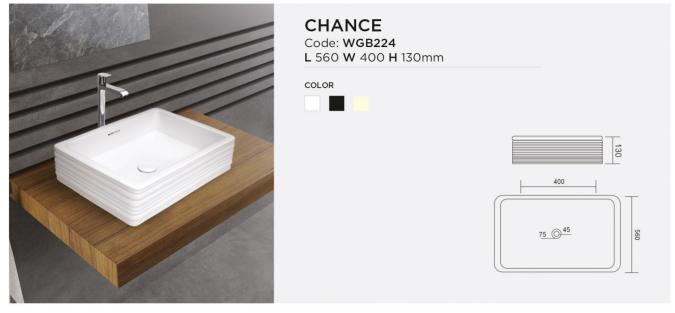




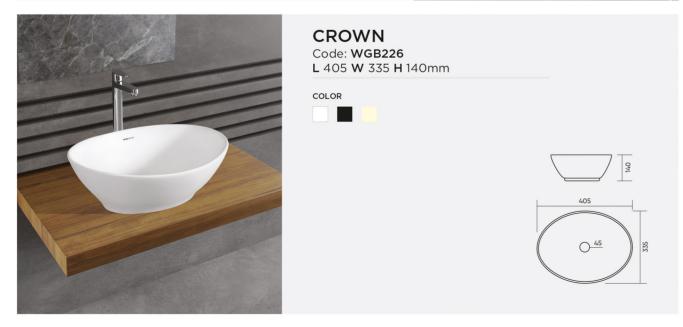

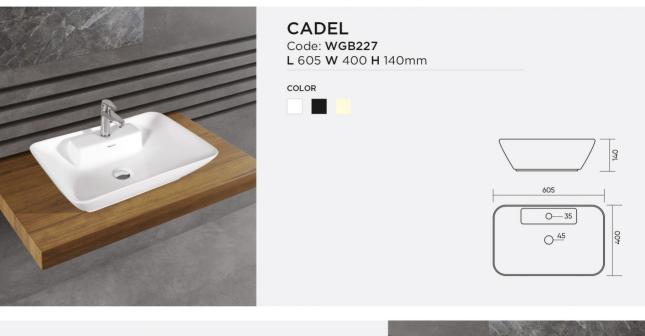

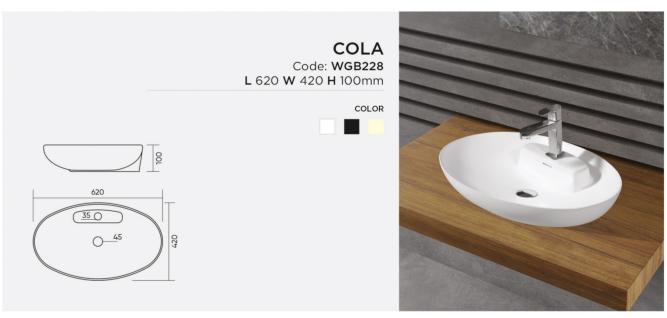

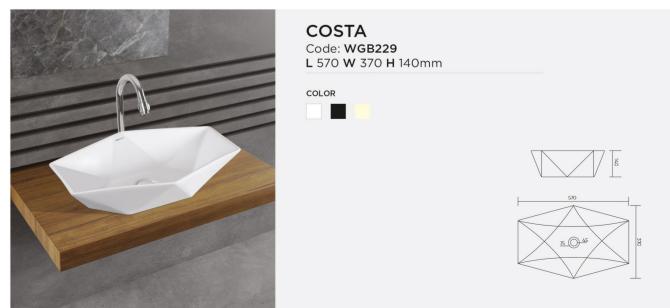



32 | Iuxury like heaven | 33







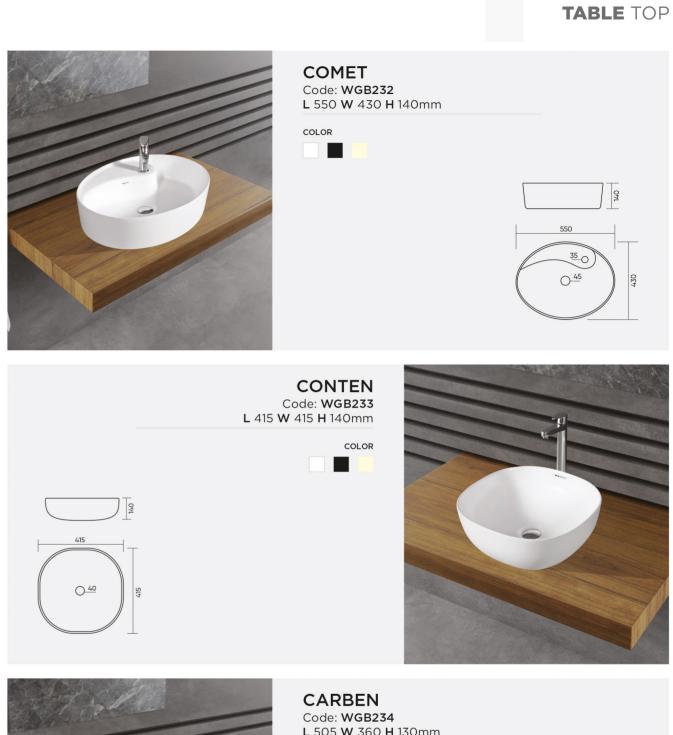

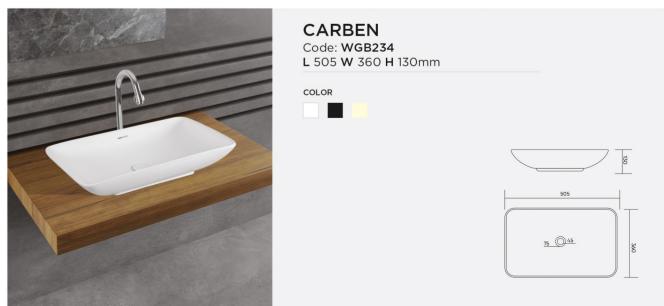



34 | luxury like heaven luxury like heaven 35








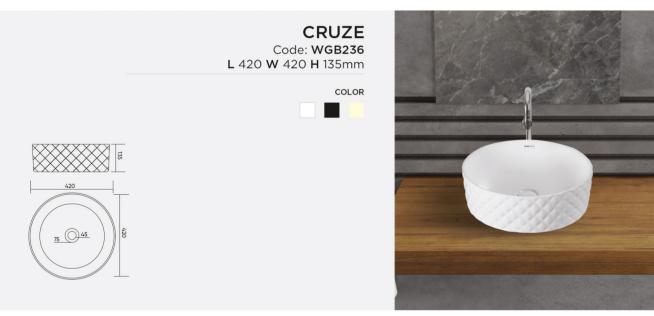

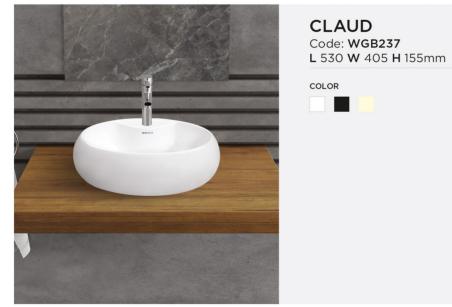





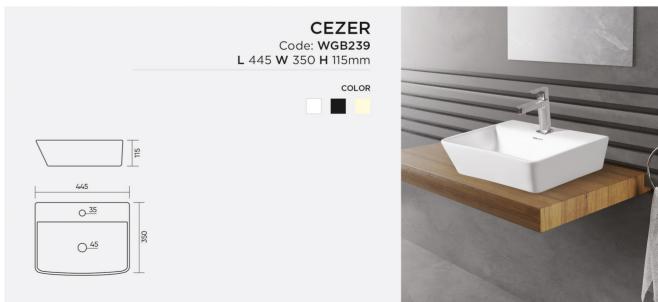


36 | luxury like heaven luxury like heaven 37







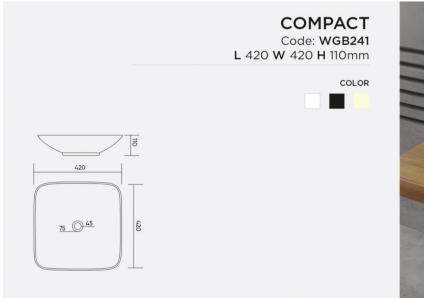










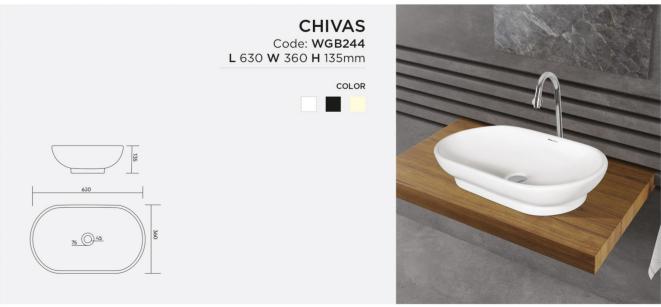

38 | luxury like heaven | 39








COLIN


COLOR

Code: WGB246 L 400 W 400 H 160mm

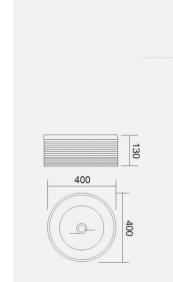







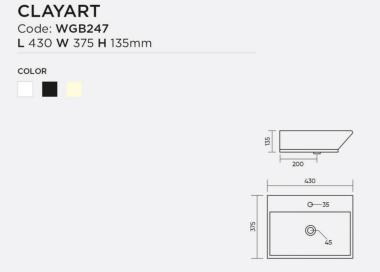



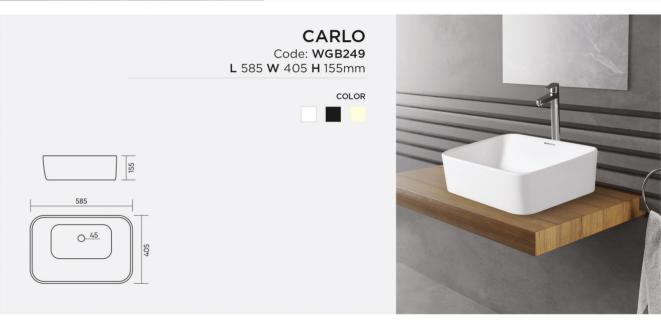


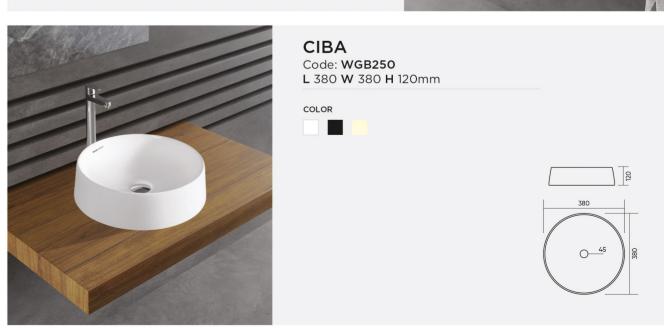


WALL HUNG BASIN





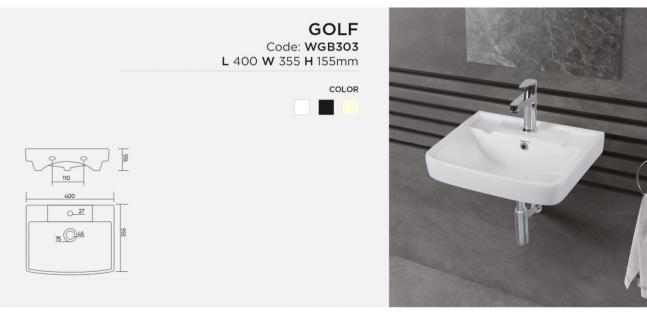

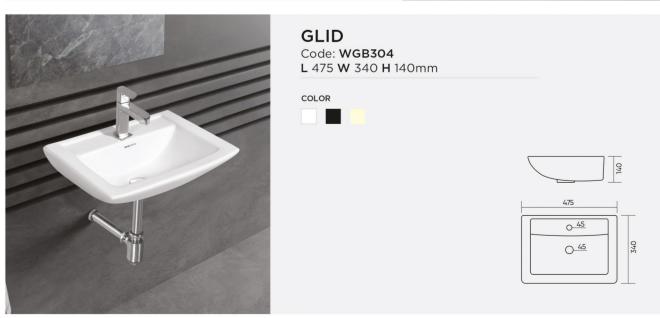
















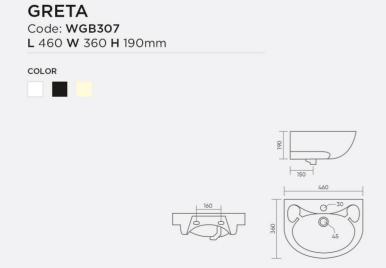















COLOR

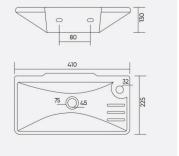








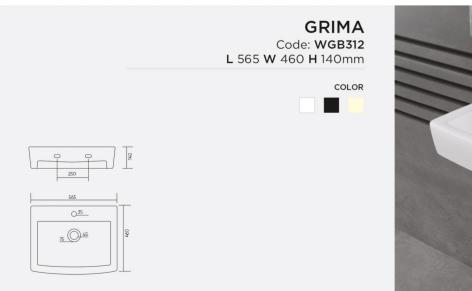





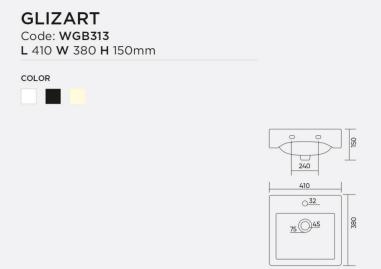











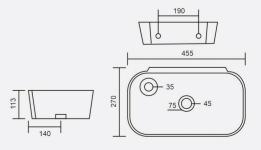








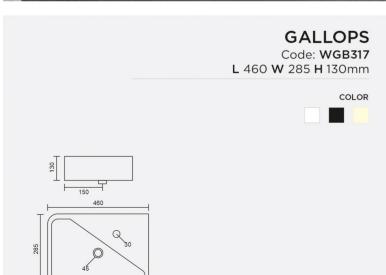







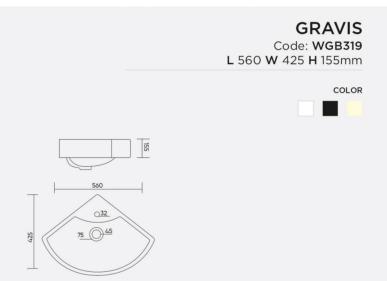













GLOBALCode: **WGB321**L 440 **W** 380 **H** 190mm COLOR

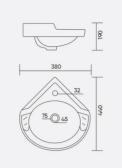

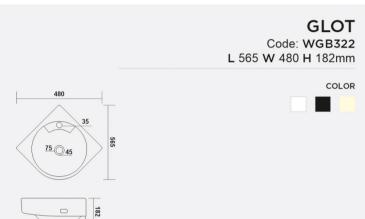















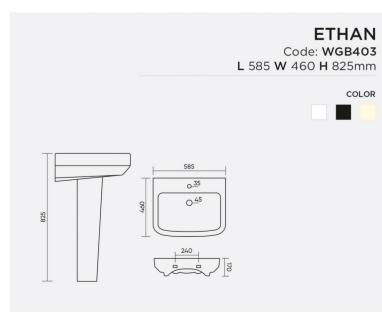





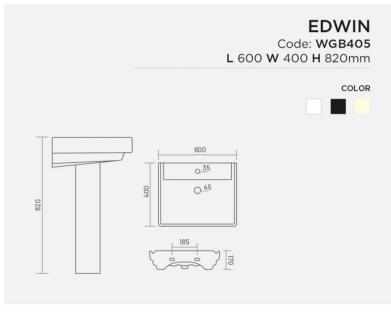














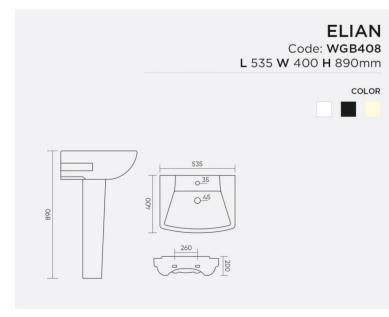
















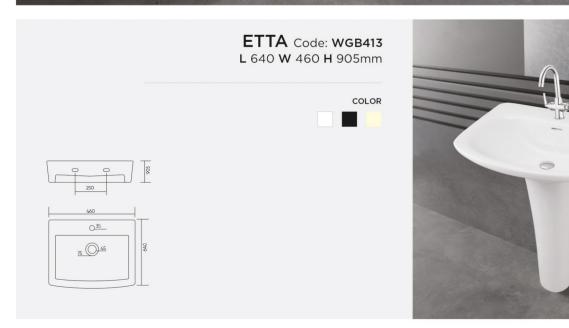

WASH BASIN HALF PADESTAL

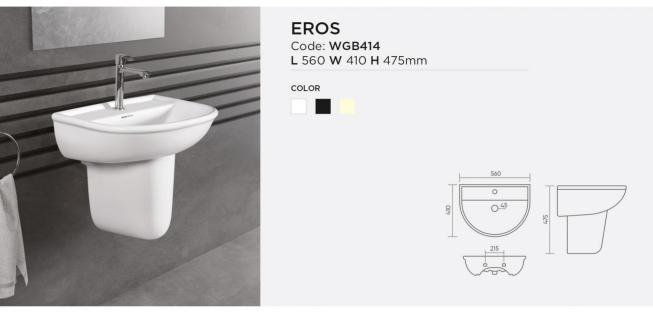

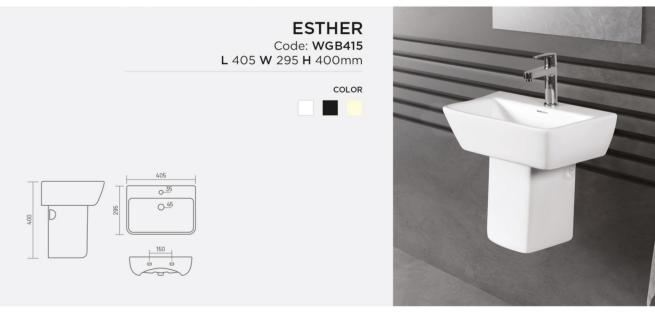










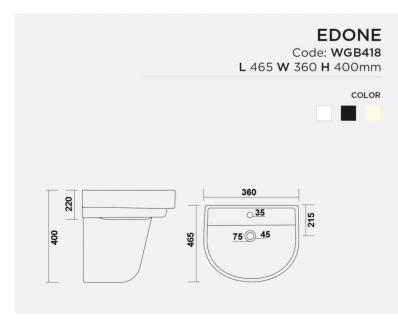










58 | luxury like heaven | 59








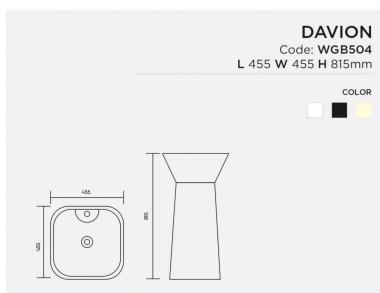





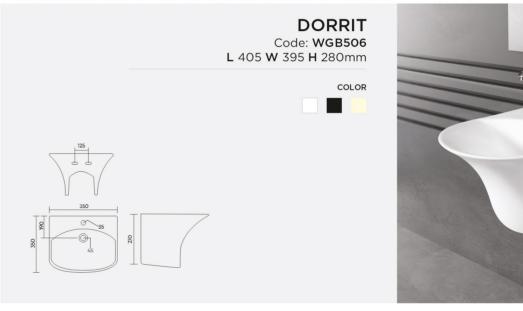








COLOR

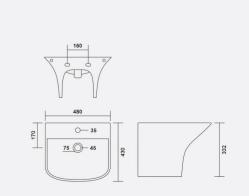






DONALD Code: **WGB508 L** 350 **W** 350 **H** 325mm COLOR


DYSON

COLOR

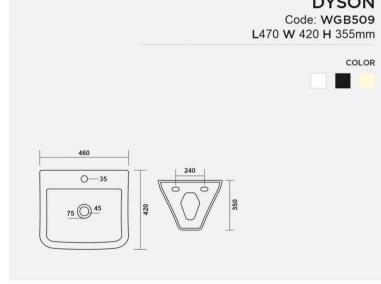







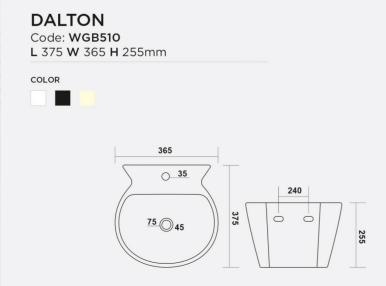



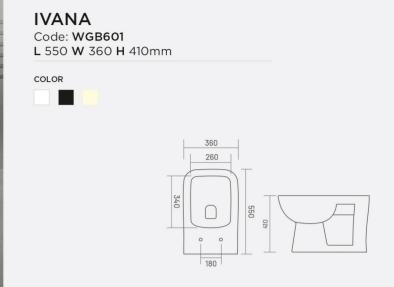

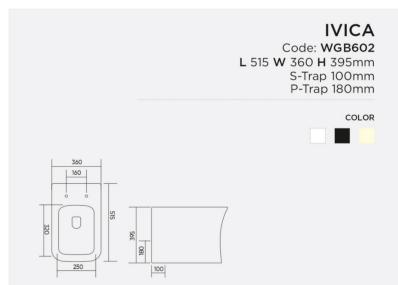












CONCEALED E.W.C Code: **WGB604 L** 585 **W** 362 **H** 395mm COLOR

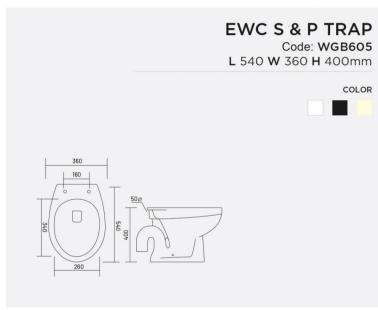


















ACU PAN 20"
Code: WGB704
L 535 W 430 H 250mm


color



SQUATTING URINAL Code: WGB705 L 435 W 340 H 100mm





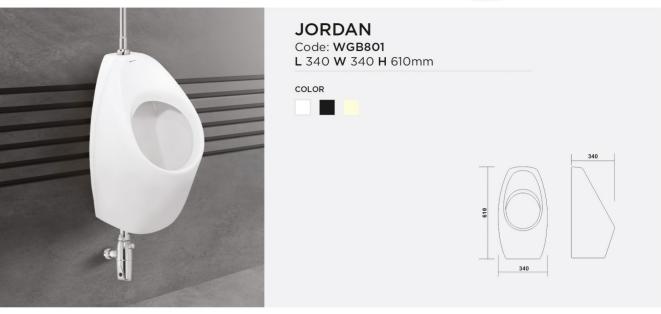






66 | luxury like heaven | 67

WINGRESS ®





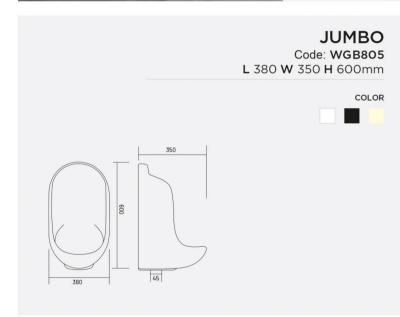








QUARTZ SINK




WGB901 Size - 18"x16"x8" Weight - 9.8 kg






WGB902 Size - 21"x18"x8.5" Weight - 12.2 kg








WGB903 Size **- 24"x18"x8.5"** Weight **- 13.7 kg**






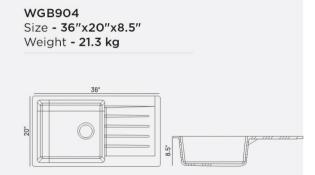

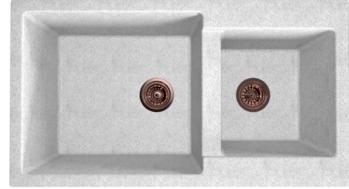

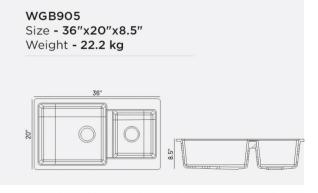



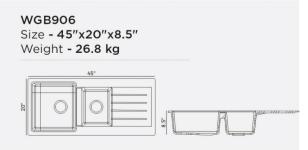

SPARKLE SERIES





Brown



White





White





Stone



Pink



Gold

68 luxury like heaven






INSTRUCTIONS

WALL HUNG BASIN


Fixing: the rag should be first grouted into the wall using cement / concrete, (as shown) as per the distance between slots provided in the wash basin. The bolts should be fixed perpendicular to the wall. Allow cement / concrete to set. Check if the Rag bolts are firmly fixed. Fix the Wash Basin in the bolts using Nuts & Washer.



CONCEALED WALL HUNG

- 1. If the wall is going to be plastered for a thickness of 12 and a tile thickness of 6-7, the projection of the bolts from the finished wall should be 66 only.
- 2. If the thickness of plastering and tile is less than the dimensions mentioned above, the bolt that are supplied along with the bracket should be moved into the wall by using a suitable spacer washer between the bolt head and the bracket
- 3. The bracket should be buried into the floor so that the height from the center line of the bolt to the surface fo the finished floor is 320.




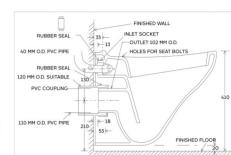







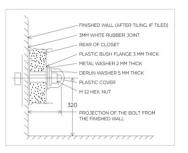

COUNTER WASH BASIN

(A) Before You Begin

- 1. Due to typical nature of the installation, under counter basin should be installed by trained and experienced installers.
- 2. Inspect the waste and supply tubing if necessary.
- 3. Install the basin in such a way, that it's removal in future can be done freely and without damage.
- 4. Prior to installation unpack the new basin and inspect it for damage. Keep the product to its protective carton until it is ready to be installed.
- 5. Observe all local plumbing and building codes.

(B) Tools and Materials

1. Sealant, Pencil, Measure Tape, Sharp knife of scissors, Keyhole or saber saw, Drill (1/2 dia, drill bit or larger) glasses, Haer, Rage or paper toweling.

NOTE: You may require different, more specialized tools to install this basin on counter top materials other than wood or wood components.

(C) Install the Basin


- 1. Check the desired lavatory location for clearance between the back splash, faucet, fixture and cabinet.
- 2. Cut out the template.
- 3. Carefully position and trace the templet on the counter top as directed on the templets.
- 4. Mark the faucet hole centerline on the counter top.
- 5. Drill a 1/2" pilot hole on the inside of the cut line.
- 6. Cut out the counter top opening with a saber or keyhole

NOTE: Install the basin in such a way that it's removal in future can be done freely and without damage.



FOR WOOD COUNTER TOPS

- 1. Mark and per-drill the wood screw holes at the locations shown on the template.
- 2. Waterproof any exposed areas of wood.



FOR MARBLE COUNTER TOPS

- 1. Position the counter top upside down on foam padding to protect the surface. Mark and drill 3/16" holes 5/8" deep at the locations shown on the template.
- 2. Use a setting tool and haer to secure the anchors.



FOR ALL INSTALLATIONS

- 1. If the counter top has not been installed, install it as stated below.
- 2. Drill the faucet holes according to the faucet installation instruction.
- 3. Install the faucet to the counter top according to the manufacture's instruction
- 4.Install the drain to the lavatory according to the manufacture's instruction.